 


# A155, A156

## Pressure restricting angle valves



Fire  
Protection

Datasheet  
0692EN  12/2023



A155



A156

The valves are capable of adjustment to provide a range of the outlet pressures under flowing condition only.  
For Hose Connections to be used on fire protection standpipe system with maximum working pressure up to 300 PSI.

### Versions and product codes

| SERIES | SIZE            | TYPE                               |
|--------|-----------------|------------------------------------|
| A155   | 1-1/2" x 1-1/2" | NPT-F inlet x NPT-F outlet         |
|        | 2-1/2" x 2-1/2" |                                    |
| A156   | 1-1/2" x 1-1/2" | NPT-F inlet x HOSE THREAD-M outlet |
|        | 2-1/2" x 2-1/2" |                                    |

## Technical data

- Rated pressure as:
  - Pressure restricting valve: 175 PSI
  - Max rated pressure: 300 PSI

### Materials

- Body: forged brass CuZn40Pb2 in accordance with European Standard EN 12165 CW617N, similar to American Standard ASTM B124 C37700
  - Yield stress of the material in the shape of bar: 360 MPa
  - Stress for permanent distortion R(0.2): 138 MPa
  - Elongation: 10 %
- Bonnet: forged brass CuZn40Pb2 in accordance with European Standard EN 12165 CW617N, similar to American Standard ASTM B124 C37700
- Stem: brass EN 12164 CW614N similar to American Standard ASTM B124 C37700
- Handwheel: red painted aluminum

### Approvals: A155, A156



### Loss pressure calculation

$$\Delta P = \left[ \frac{GPM}{C_v} \right]^2$$

$\Delta P$  = Differential Pressure (Difference between Inlet and Outlet Pressure) in PSI.  
 GPM = Water Flow Rate in Gallons per Minute  
 Cv = Valve Coefficient

#### A155/A156 1-1/2"

| SET NUMBER | Cv    |
|------------|-------|
| 1          | 4,40  |
| 2          | 6,20  |
| 3          | 6,95  |
| 4          | 7,60  |
| 5          | 7,78  |
| 6          | 8,03  |
| 7          | 10,09 |
| 8          | 12,70 |
| 9          | 13,91 |
| 10         | 16,63 |
| 15         | 19,67 |
| F.O.       | 28,00 |

#### A155/A156 2-1/2"

| SET NUMBER | Cv    |
|------------|-------|
| 1          | 13,9  |
| 2          | 19,6  |
| 3          | 24,2  |
| 4          | 25,5  |
| 5          | 28,1  |
| 6          | 30,05 |
| 7          | 30,9  |
| 8          | 34,08 |
| 9          | 35,78 |
| 10         | 37,6  |
| 11         | 38,4  |
| 12         | 39,45 |
| 13         | 40,45 |
| 14         | 41,8  |
| 15         | 43,39 |
| 16         | 46,8  |
| 17         | 51,2  |
| 18         | 58,36 |
| 19         | 65,6  |
| 20         | 73,32 |
| F.O.       | 125   |

## ➤ Determining the proper outlet pressure

1) The valves are reducing the downstream water pressure under flowing (residual) condition only.

The valve should not be set to provide less than the minimum pressure required by NFPA 14 while flowing 250 GPM for 2-1/2" size and 100 GPM for 1-1/2" size.

NFPA 14 requires that Standpipe systems shall be hydraulically designed to provide the required water flow rate at a minimum residual pressure of 100 PSI at the outlet of hydraulically most remote 2-1/2" hose connection and 65 PSI at the outlet at the hydraulically most remote 1-1/2" hose station.

Outlet pressures which do not correspond to NFPA 14 requirements must be authorized by local fire department.

There will be a pressure drop due to friction between the outlet and the nozzle.

The amount of this loss should be calculated by qualified personnel, to assure that the nozzle receives water pressure sufficient to its design needs.

Note that some fire hose nozzles may not operate properly when valve outlet pressure is set at the 100 PSI minimum authorized in the 2007 edition of NFPA 14.

The installer should consult with the fire authorities concerning pressures needed by their equipment.

The outlet pressures indicated in the curves are at the outlet of the valve.

2) To determine the pressures at the hose nozzle, the hydraulic calculation information provided in NFPA. Fire Protection Handbook should be followed.


3) The valves are designed and Listed to reduce inlet pressures under flowing conditions: see the following graphs.

Authorities having jurisdiction should be consulted to confirm that the outlet pressures and flowrates are acceptable.


**▲ WARNING.** The graphs are referred only to the indicated conditions of flow and pressure, as tested at Giacomini test station.

Should the local codes or the designing Engineer require graphs for different conditions, or the test procedure on the field is specified, please contact the factory or your local representative for alternate graphs to suit field conditions.


**A155/A156 1-1/2" SETTING: 1-6**

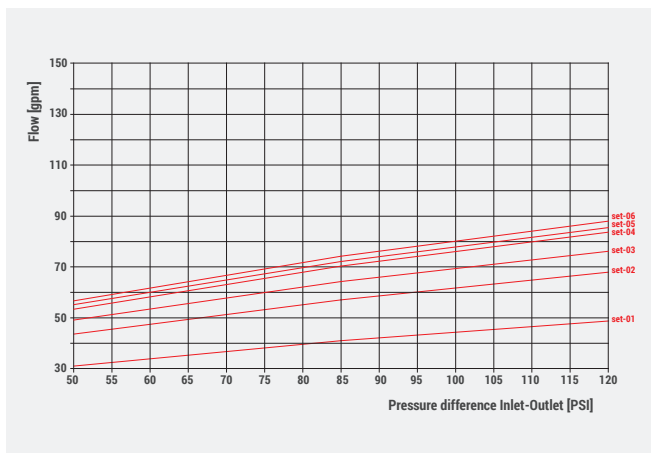


**A155/A156 1-1/2" SETTING: 7-F.O.**

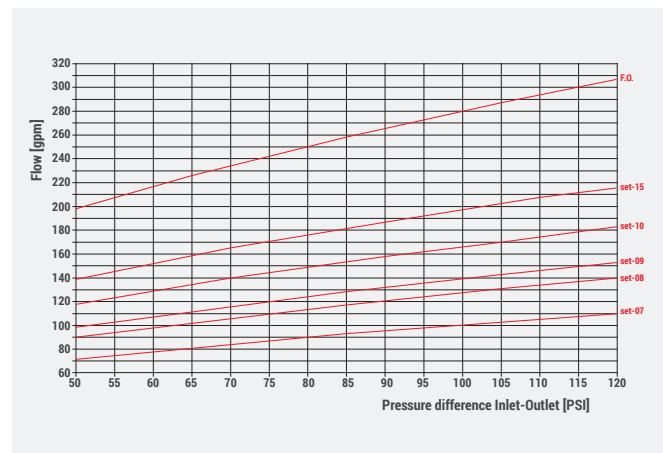

**A155/A156 2-1/2" SETTING: 1-10**

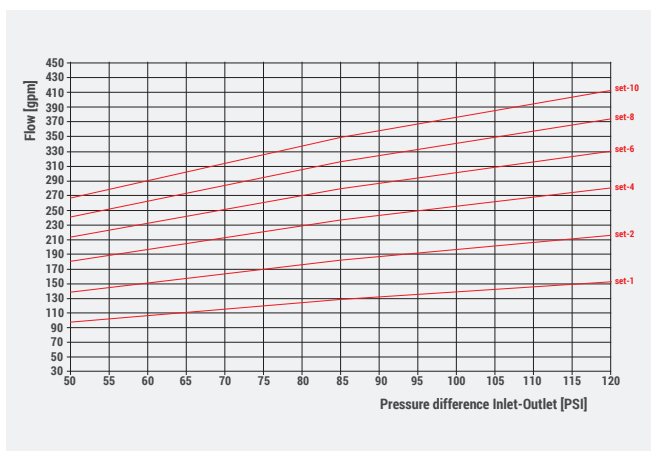

**A155/A156 2-1/2" SETTING: 12-F.O.**

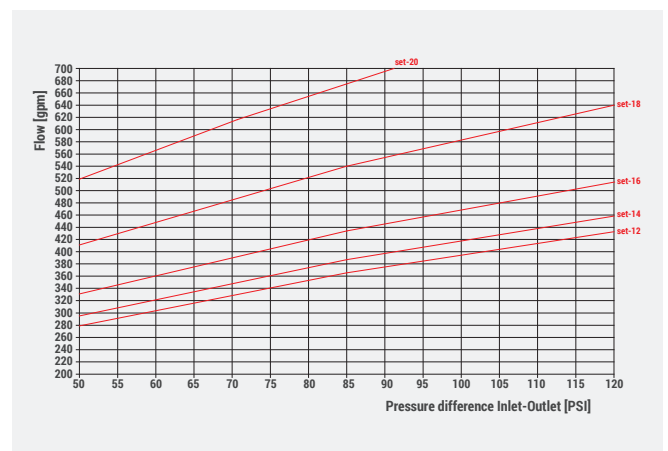


## ➤ Installation

- 1) Pipe unions or rubber-gasketed fittings are to be installed immediately upstream and downstream of the valve to permit easy replacement.
- 2) Connect the valve to the piping.
- 3) Select setting number from proper graph.
- 4) Close valve hand-tight.
- 5) Loosen set screw in collar.
- 6) Rotate indicator-cap until top collar reaches selected setting number.
- 7) Tighten set screw in collar. Valve is now set.
- 8) To override pressure restriction, pull spring clip. See Fig.1.

- These valves are intended for use in Class III Standpipe systems.
- Pipe unions or rubber-gasketed fittings are to be installed immediately upstream of the valve to permit easy replacement.
- If the valve fail to perform as intended, the valve would need to be replaced.

The valves must be installed on threaded end NPT pipe line using appropriate tools through the hexagon at the bottom of the body. During the installation pay attention not to deform the bonnet or other valve parts, as this could compromise the valve functioning. By turning the handle counterclockwise, the valve opens and it closes by turning the handle clockwise. After installation, verify the tightness through a pressure test.

Fig.1

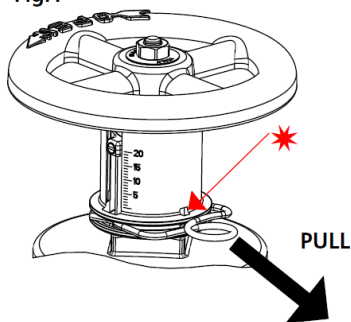

\* Hole which allows the insertion of a wire, not to lose the spring.

## ➤ Maintenance


The valves require no special maintenance. Conduct periodic hydraulic tightness test and check the correct manoeuvrability. In case of damage of the seal seat or of the bonnet, the valve must be replaced. However it is recommended to replace the valve after a lifetime of ten years.

### **Maintenance and testing should be done in accordance with NFPA 25.**

- 1) In the event the valve leaks, the test valve should be opened again to flush the valve.
- 2) The valve should be inspected for damage or corrosion annually.
- 3) The valve is not designed to accept replacement parts.
- 4) The system should be drained every two to three years and all valves opened fully and lubricant applied to the valve stem. The valve seat should be inspected for debris.
- 5) The valve should be operated by hand, never using a torque bar or other device to exert pressure. Excess torque may damage the seat and or stem, disc, and other working parts.
- 6) If the valve fails to perform as intended, the valve should be replaced.


## ➤ Dimensions

### A155

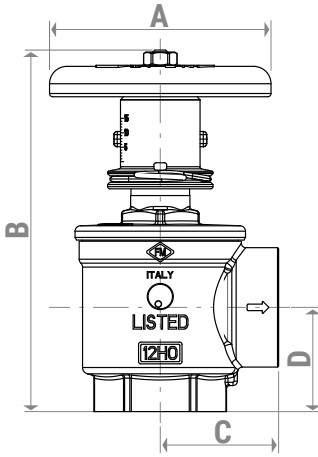

| SIZE   | A       | B        |           | C       | D      |
|--------|---------|----------|-----------|---------|--------|
|        |         | CLOSED   | OPEN      |         |        |
| 1-1/2" | 4-1/32" | 6-1/2"   | 7-19/32"  | 2-5/32" | 1-7/8" |
| 2-1/2" | 5-1/8"  | 8-29/32" | 10-19/32" | 3-5/32" | 2-5/8" |

### A156

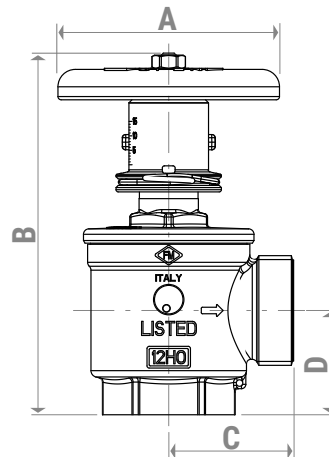

| SIZE   | A       | B        |           | C      | D      |
|--------|---------|----------|-----------|--------|--------|
|        |         | CLOSED   | OPEN      |        |        |
| 1-1/2" | 4-1/32" | 6-1/2"   | 7-19/32"  | 2-1/4" | 1-7/8" |
| 2-1/2" | 5-1/8"  | 8-29/32" | 10-19/32" | 3"     | 2-5/8" |

## ➤ Product specifications

### A155 1-1/2"

Angle pressure restricting valves for water pressure control by adjustable flow restriction; forged brass body with 1-1/2" female-female NPT threads and red painted aluminum, handweel. Rated pressure 175 PSI. Complete with spring clip to override the setting when full flow is required.

### A156 1-1/2"

Angle pressure restricting valves for water pressure control by adjustable flow restriction; forged brass body with 1-1/2" female NPT - 1-1/2" male hose thread and red painted aluminum, handweel. Rated pressure 175 PSI. Complete with spring clip to override the setting when full flow is required.

### A155 2-1/2"

Angle pressure restricting valves for water pressure control by adjustable flow restriction; forged brass body with 2-1/2" female-female NPT threads and red painted aluminum, handweel. Rated pressure 175 PSI. Complete with spring clip to override the setting when full flow is required.

### A156 2-1/2"

Angle pressure restricting valves for water pressure control by adjustable flow restriction; forged brass body with 2-1/2" female NPT - 2-1/2" male hose thread and red painted aluminum, handweel. Rated pressure 175 PSI. Complete with spring clip to override the setting when full flow is required.

**⚠ Safety Warning.** Installation, commissioning and periodical maintenance of the product must be carried out by qualified operators in compliance with national regulations and/or local standards. A qualified installer must take all required measures, including use of Individual Protection Devices, for his and others' safety. An improper installation may damage people, animals or objects towards which Giacomini S.p.A. may not be held liable.

**♻ Package Disposal.** Carton boxes: paper recycling. Plastic bags and bubble wrap: plastic recycling.

**ℹ Additional information.** For more information, go to [giacomini.com](http://giacomini.com) or contact our technical assistance service. This document provides only general indications. Giacomini S.p.A. may change at any time, without notice and for technical or commercial reasons, the items included herewith. The information included in this technical sheet do not exempt the user from strictly complying with the rules and good practice standards in force.

**♻ Product Disposal.** Do not dispose of product as municipal waste at the end of its life cycle. Dispose of product at a special recycling platform managed by local authorities or at retailers providing this type of service.